

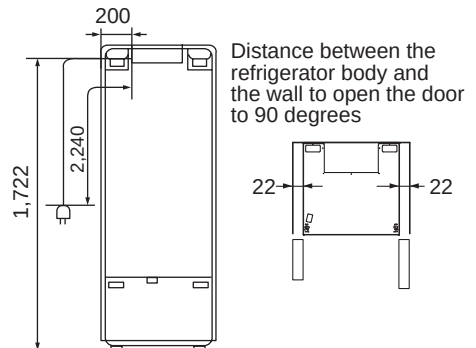
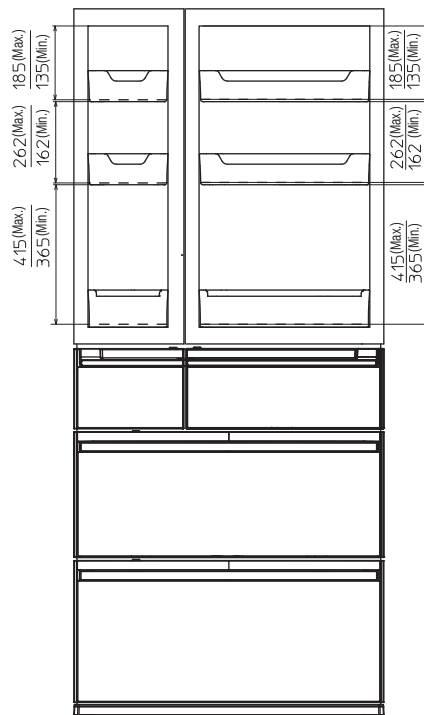
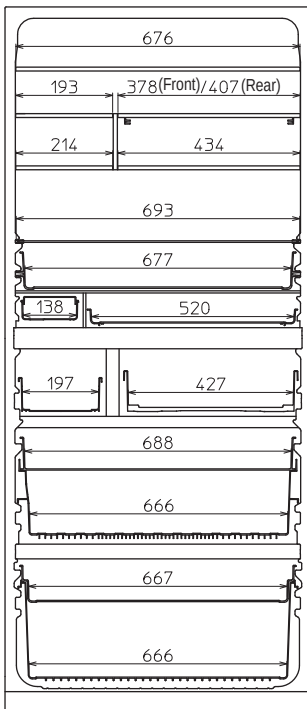


## MR-WX743Y-A

Unit: mm

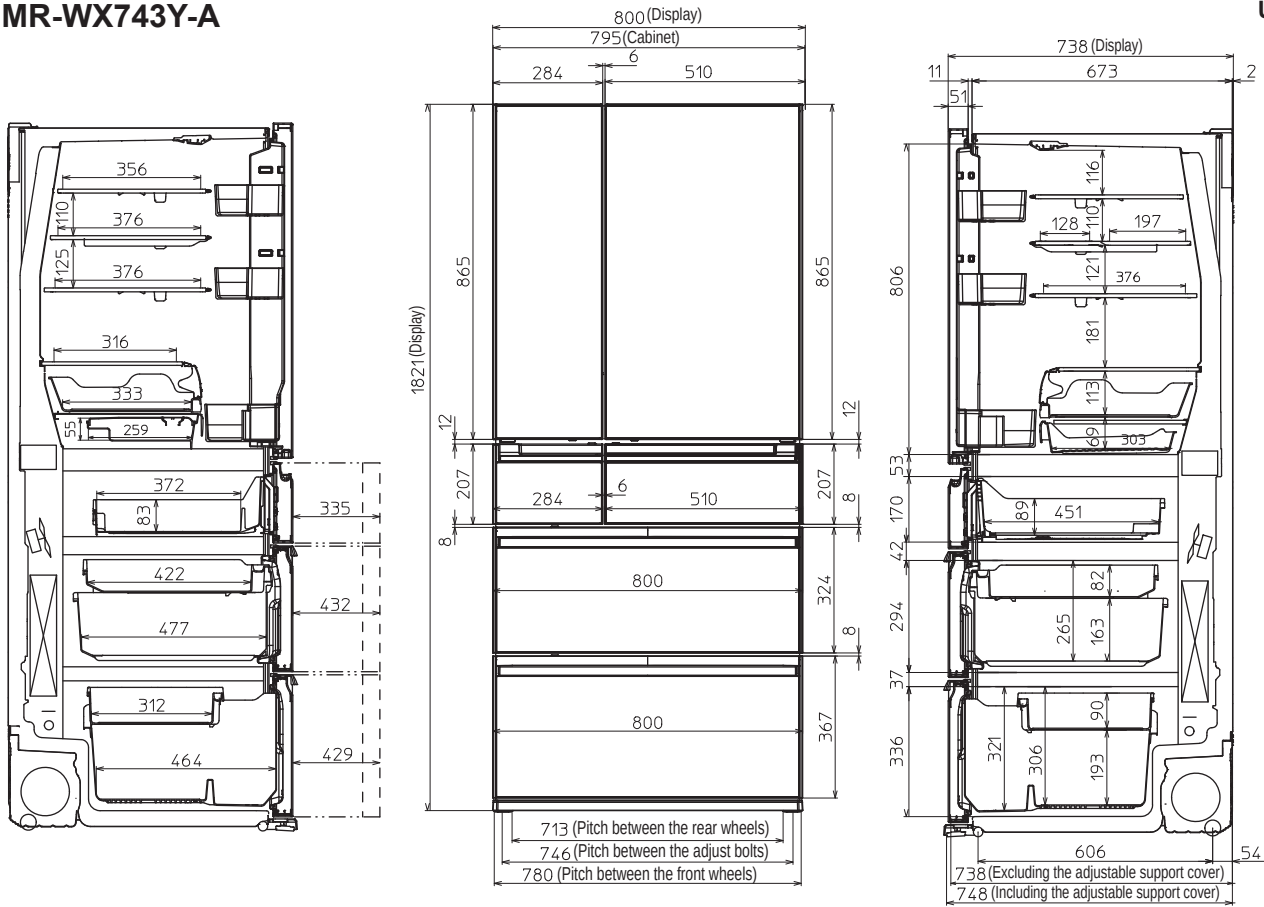

## REQUIRED SPACE FOR INSTALLATION

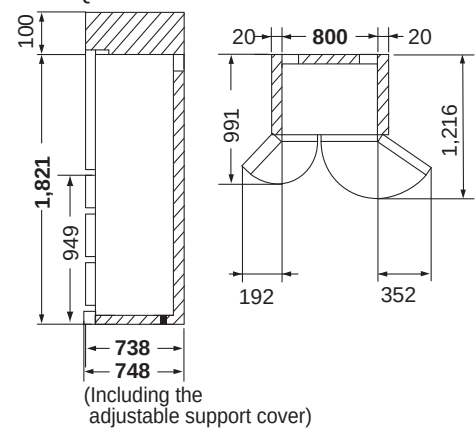

## DOOR DIMENSION

|        | R(L) | R(R) | I   | S   | F   | V   |
|--------|------|------|-----|-----|-----|-----|
| Height | 865  | 865  | 207 | 207 | 324 | 367 |
| Width  | 284  | 510  | 284 | 510 | 800 | 800 |

R(L) : Refrigerator compartment (Left)  
 R(R) : Refrigerator compartment (Right)  
 I : Ice making compartment  
 S : Select compartment [Versa compartment]  
 F : Freezer compartment  
 V : Vegetable compartment

## MR-WX743Y-A

Refrigerator Compartment About 0°C to 6°C

## Left: Glass Shelf (Middle) Separate Glass Shelf

The height can be changed upward and downward. Lowering it places it at a storage location suitable for the egg tray.



The height of the wide shelf can be changed on the left and right sides.

## Right: Slide Glass Shelf (Front) (Back)

The height can be changed upward and downward. If you slide the shelf to the back, you can store high objects.

## Interior Light

Uses 10 LEDs.


## Glass Shelf (Upper)

The height can be changed upward and downward.

## Glass Shelf (Lower)

## Adjustable Pocket (Large)

## Adjustable Pocket (Large) (Small)

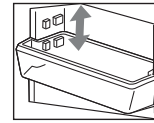

The height of the adjustable pockets can be changed.

## Air Outlet

If food with a high water content is placed near the air outlets, it may freeze.

## Adjustable Pocket (Small)

## Partition

## Egg Tray with Egg Shelf


## Bottle Pocket (Small)

## Control panel

## Bottle Pocket (Large)

Store plastic or glass bottles.

## Slide Cases About -3°C to 3°C

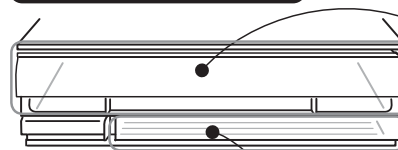

## Upper Case

- Processed food such as sausage, ham and dairy products can be preserved.
- Do not store food that is easily frozen.
- The temperature cannot be adjusted.

## Lower Case

Supercool chilling can be set with .

- Food will not freeze, even below the freezing point (about -3°C to 0°C)
- The freshness of meat and fish can be prolonged without freezing.

## Rotating Partition

Open and close the doors slowly. If you open or close the doors with force, the rotating partition may open to the front. Return the partition to its regular position before closing the door. (Otherwise it may be damaged.)



Bottom handles



Front lower inside

Hand-holds on the rear upper side

## Ice Making Compartment

## Tank Cap

## Lid

## Ice Tray Lock Lever

## Ice Tray

## Water Tank (About 1.2L)

Push in the water tank until it touches the rear side and confirm that the handle is aligned with the front of the lower case.

## Soundproof Mat

Reduces the sound of dropping ice.

Do not dispose of it.

## Ice Storage Box

## Versa Compartment


## Aluminum Tray

The cold tray quickly cools the food.

## Versa Compartment Case

Do not stack food higher than the case. Doing so may result in the door being unable to close, food melting, or food being damaged.


## Freezer Compartment

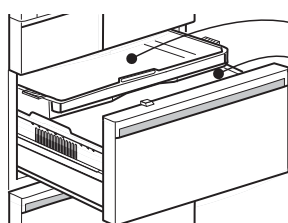

## Freezer Case (Upper)

## Freezer Case (Lower)

## Vegetable Compartment

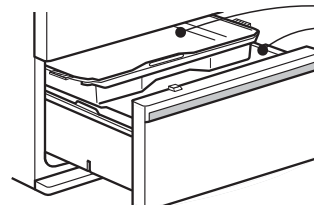

## Vegetable Case (Upper)

## Vegetable Case (Lower)